



DESCRIPTION

- Latch-on head keeps wrench on fastener
- Ring prevents nut/fastener head from sliding through wrench

SPECIFICATIONS TABLE

PART NO.		A (mm)	L (mm)
RBZM78	7 - 8	15.1 - 17.1	114
RBZM910	9 - 10	20.4 - 22.6	140
RBZM1112	11 - 12	25.8 - 29.4	175
RBZM1314	13 - 14	25.8 - 29.4	175
RBZM1517	15 - 17	32.9 - 36.5	206
RBZM1618	16 - 18	32.9 - 36.5	206
RBZM1921	19 - 21	35.7 - 40.1	235

PART NO.		A (inches)	L (inches)
RBZ810	1/4 - 5/16	3/8	4 1/2
RBZ1214	3/8 - 7/16	3/8	5 7/2
RBZ1618	1/2 - 9/16	1/2	6 1/8
RBZ2022	5/8 - 11/16	1/2	9 1/4
RBZ2428	3/4 - 7/8	1/2	9 1/4